


profi-air® 180 flat connection box

Installation and operating instructions

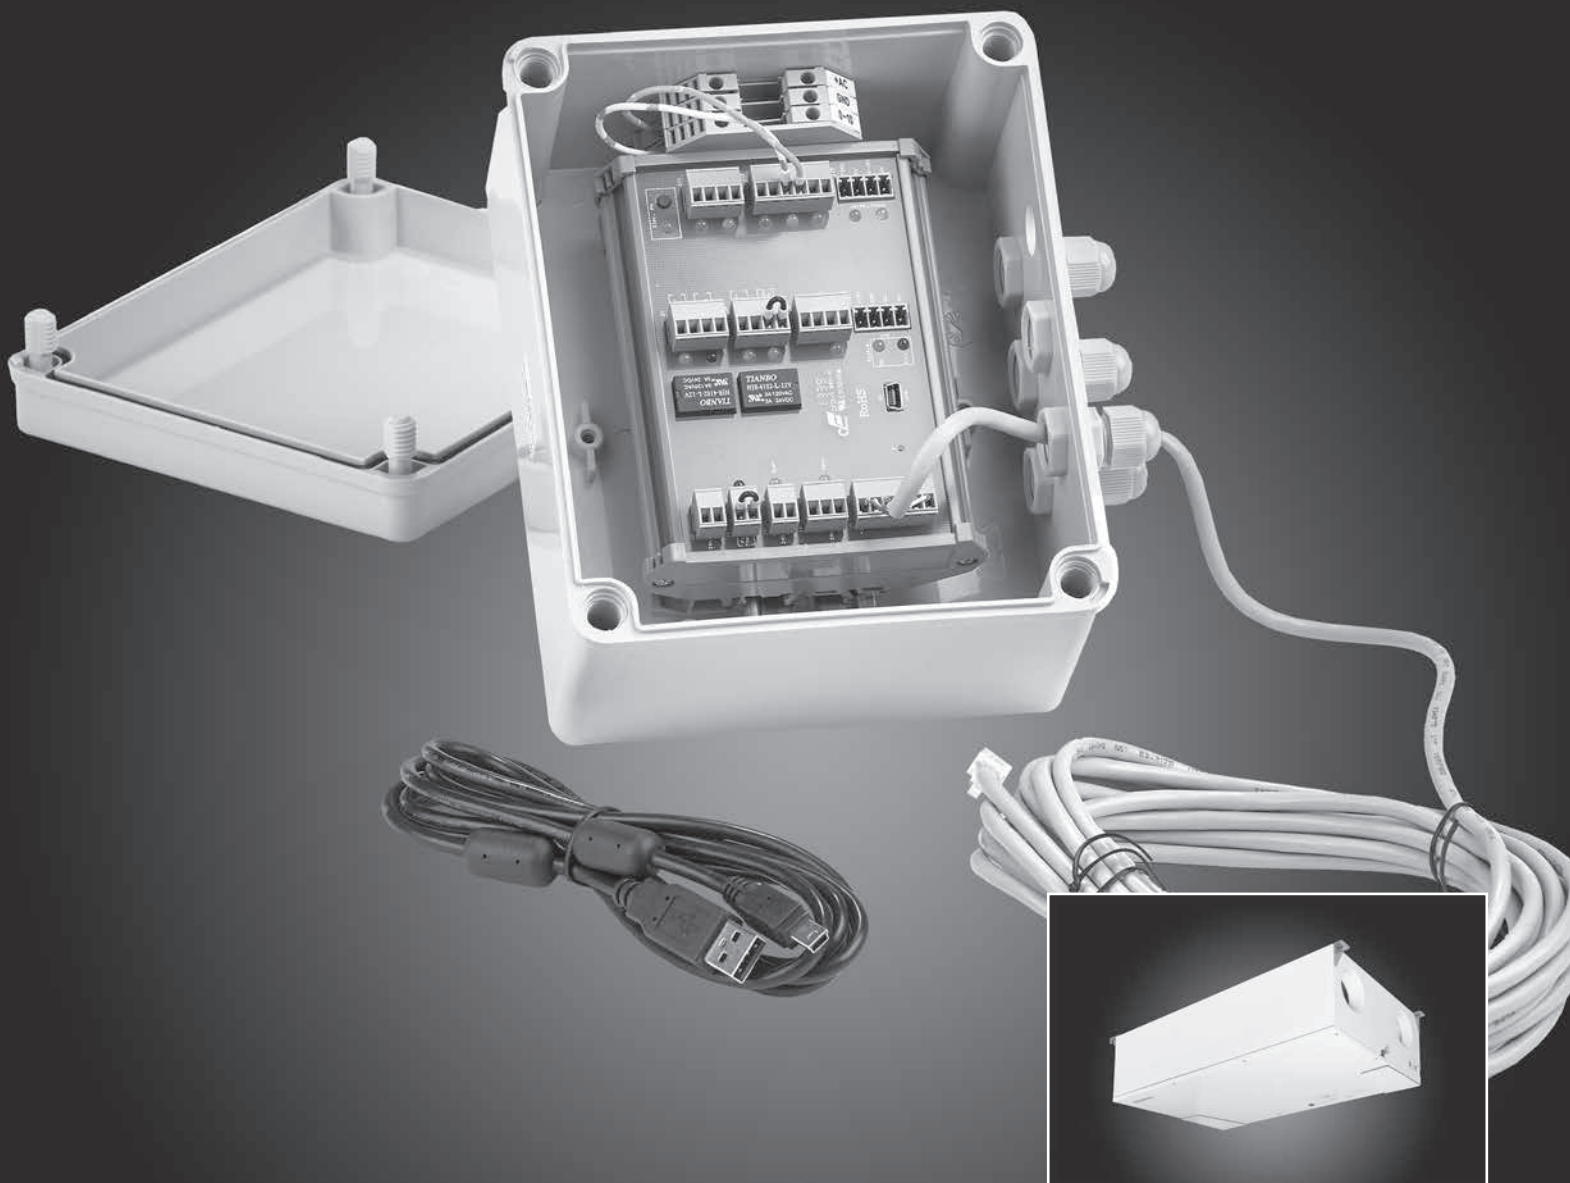

DRAINAGE SYSTEMS
ELECTRICAL SYSTEMS
BUILDING TECHNOLOGY
INDUSTRIAL PRODUCTS

Table of contents

1 General		
	1.1 Introduction	3
	1.2 Safety	3-4
2 Intended use		4
3 Structure		4
4 Scope of delivery		4
5 Technical data		
	5.1 Connection options	5
	5.2 Dimensional drawing	5
	5.3 Schematic wiring diagram	6
6 Wiring diagrams		6
	6.1 Modbus (connection to the ventilation unit)	7
	6.2 Fire/smoke alarm input	7
	6.3 Humidistat input	8
	6.4 Standby input	9
	6.5 External fan activation input	10
	6.6 Error message output	10
7 Warranty		11
8 Liability		11
9 Disposal		11

All information in this publication generally reflects the state of the art at the time of printing. Furthermore, considerable care was taken when preparing this publication. Nevertheless, typesetting and translation errors cannot be entirely excluded. We also reserve the right to make changes to our products, specifications and other data. Changes may also become necessary as a result of legal, material-related or other technological requirements, which cannot or can no longer be considered in this publication. For this reason, we cannot assume any liability which is based solely on the data provided in this publication. The decisive role with regard to the data on products and services is always played by the order placed, the product actually purchased and the documentation in connection with it, or the information provided by our specialist staff in each specific individual case.

1 General

The profi-air 180 flat connection box extends the range of electric wiring

options of the profi-air 180 flat ventilation unit.

1.1 Introduction

These installation and operating instructions are intended to help you install a fully functional profi-air 180 flat connection box and properly operate it. We recommend that you read these instructions carefully before you com-

mence installation. These installation and operating instructions can also serve as a reference for service and maintenance work and guarantee smooth and efficient operation.

1.2 Safety

If used for its intended purpose, the device is safe and reliable to operate. The construction and design are state of the art and comply with all relevant

DIN / VDE regulations and safety provisions. All safety regulations, warnings and notices of these installation and operating instructions have to be com-

plied with; non-compliance may result in personal injury and/or damage to the profi-air 180 flat connection box.

1.2.1 Safety regulations

- Installation, connection and taking into operation of the profi-air 180 flat connection box must be performed by authorised and qualified personnel only.
- Installation of the profi-air 180 flat connection box must be carried out according to applicable local construction, safety and installation regulations.
- Unauthorised changes or modifications of the profi-air 180 flat connection box are not permitted.
- Keep these installation and operating instructions near the device during the entire life of the profi-air 180 flat connection box.

1 General

1.2.3 Symbols used



Risk of personal injury



Risk of:

- damage to equipment
- errors while operating the device if the instructions are not complied with correctly
- other material damage



Additional notices



Reference to other sections and/or guidelines of the manufacturer.



Disposal instructions

2 Intended use

The profi-air 180 flat connection box is an extension of electric connection options for the profi-air 180 flat ventila-

tion unit. It is connected directly to the mainboard of the ventilation unit.

3 Structure

The profi-air connection box consists of a control board with various inputs and outputs. The control board is incorporat-

ed into a plastic housing which is installed near the ventilation unit.

4 Scope of delivery


- Connection box incl. 4 PG threaded connectors
- Approx. 2.5 m of connection cable wired / with RJ25 connector plug to connect to the mainboard of the profi-air 180 flat ventilation unit.
- USB cable (exclusively for the factory customer service for firmware updates)
- Installation and operating instructions

5 Technical data

5.1 Connection options


- Fire alarm
- Standby switch
- Room humidistats
- External fan activation
- External filter alarm
- External fault alarm

5.2 Dimensional drawing

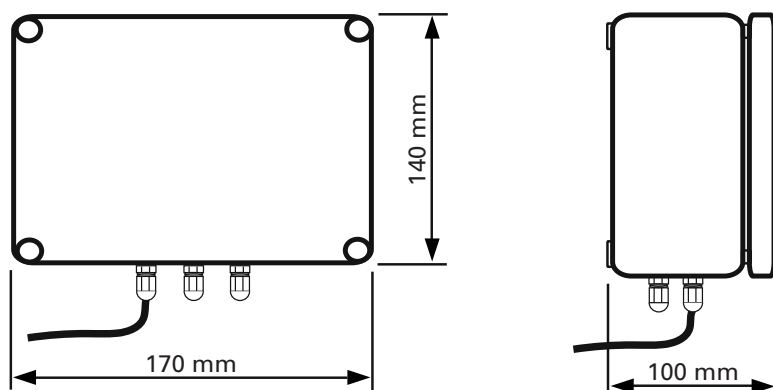

5 Technical data

5.3 Schematic wiring diagram

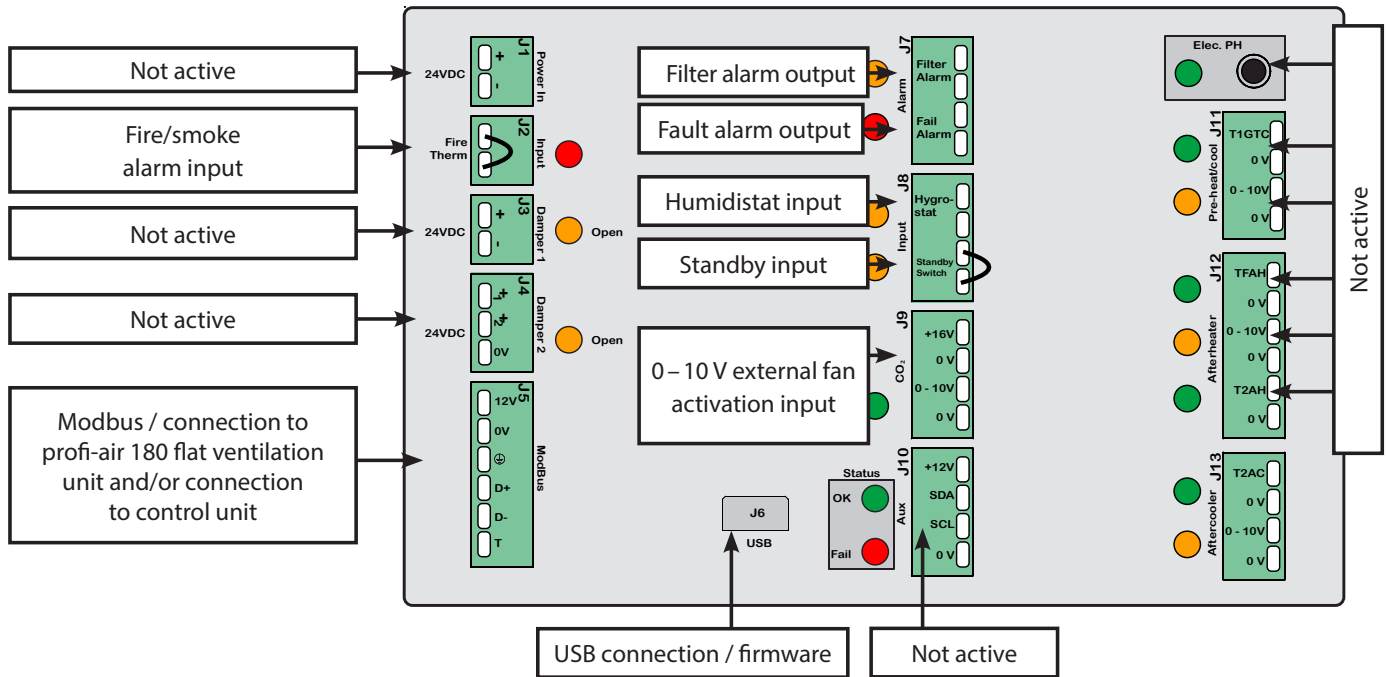

6 Wiring diagrams

The profi-air connection box must be wired and put into operation according to the following wiring diagrams.



All connection activities must be performed in the "dead" state only since otherwise the connection box or the mainboard of the ventilation unit may be damaged.



All connection activities must be carried out by authorised and qualified personnel only. Additionally, applicable local regulations and safety provisions must be observed.

6 Wiring diagrams

6.1 Modbus (connection to the ventilation unit)

The Modbus connection is used to connect the connection box to the mainboard of the profi-air 180 flat ventilation

unit. It is already connected in the delivery state.



For information on the connection to the mainboard of the profi-air 180 flat ventilation unit, see installation and operating instructions of the ventilation unit.

Since the external control unit delivered with the profi-air 180 flat ventilation unit also uses the Modbus interface on the mainboard, it must also be connected to


the clamping points of the connection box on site. Please observe the colour coding of the wires.

6.2 Fire/smoke alarm input

The input can be used to connect the fire/smoke alarm with a relay output. When delivered, the contact is furnished with a bridge. If this contact is interrupt-

ed by, e.g., a triggered fire/smoke alarm, the control system deactivates the ventilation unit. In order to put the ventilation unit back into operation, it must be com-

pletely disconnected from the power supply for a short period of time.

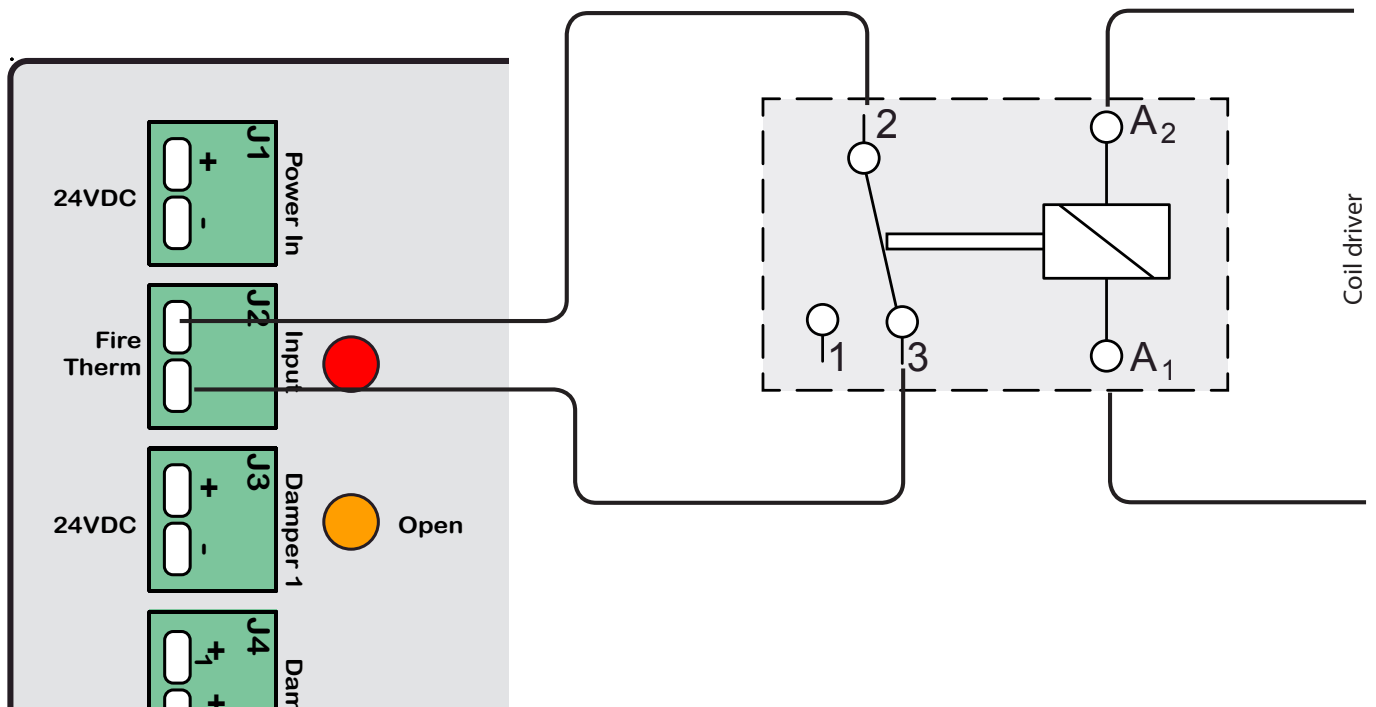

To use the function, the contact must be connected to the break-contact relay (see illustration), and the factory-provided bridge must be removed. If the relay

is in a "live" state, the contact is closed. If the current at the relay drops, the contact will be broken and the ventilation unit will be deactivated. The J2 contact

is operated at a maximum of 24 V DC / 300 mA.


6 Wiring diagrams

6.3 Humidistat input

profi-air room humidistats (Cat. no. 78300841) can be connected to this input. If the set value at the room humi-

distat is exceeded, the control system switches the ventilation unit to mode 3. If the wiring is arranged in parallel, sev-

eral room humidistats can be connected to the contact.

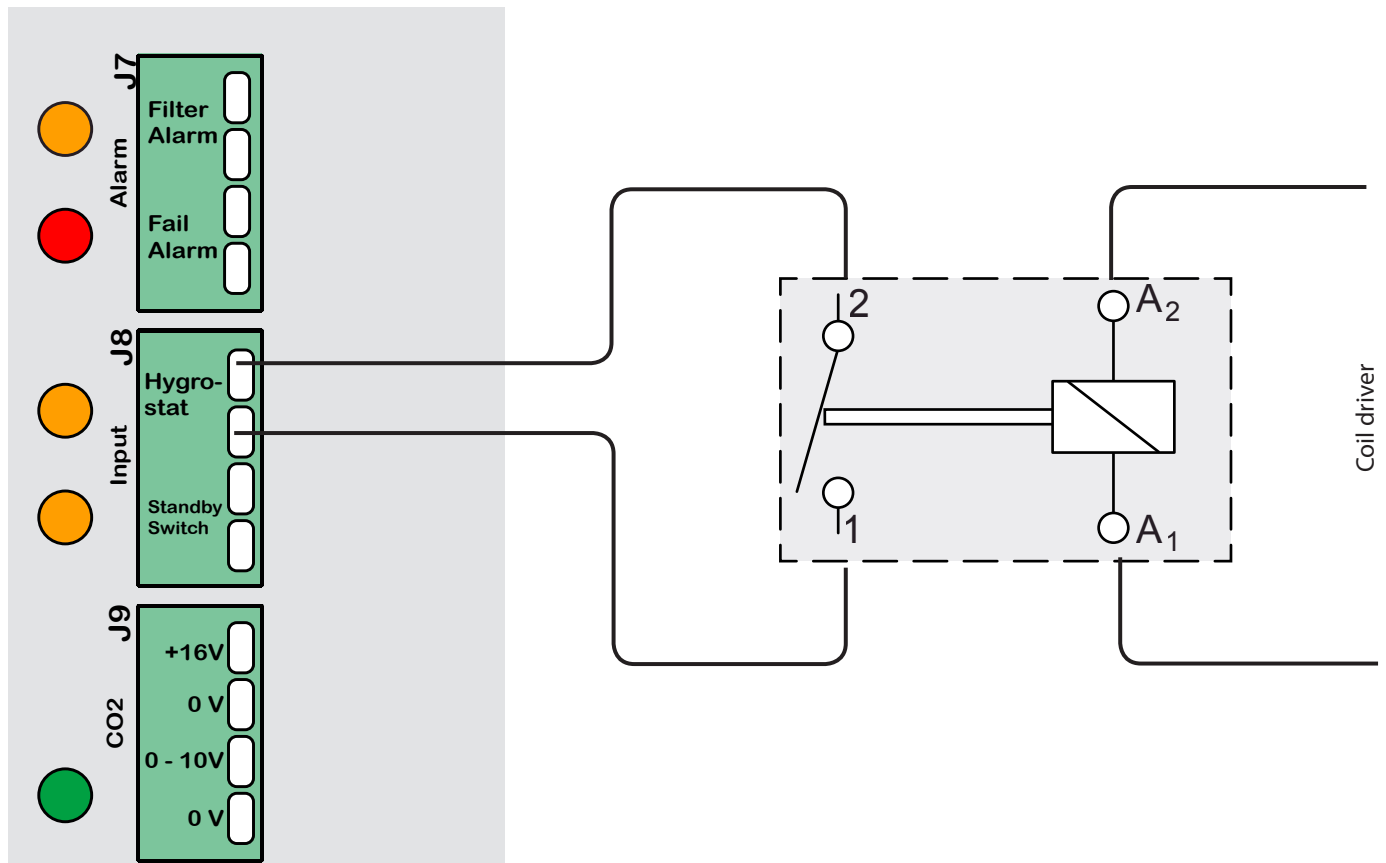


The digital input on the control board of the ventilation unit can also be used to connect the room humidistats to the profi-air 180 flat ventilation unit. See profi-air 180 flat operating instructions.

6 Wiring diagrams

6.4 Standby input

The input can be used to connect the standby switch to the ventilation unit.

- Contact closed – ventilation unit in operation
- Contact open – ventilation unit out of operation

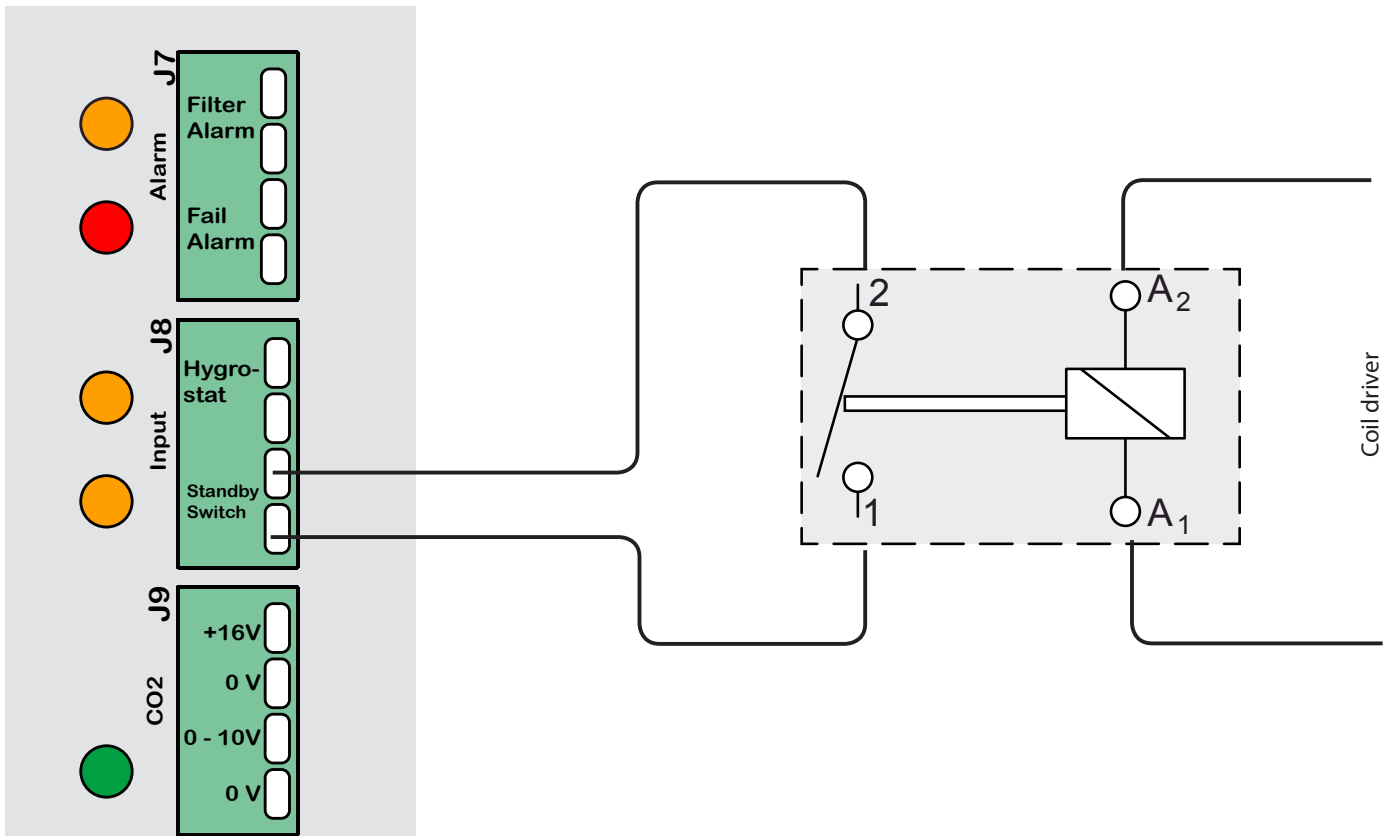



! If the system has been switched off over a longer period of time, this causes an increased risk of condensation in the pipes, and/or might lead to moisture damage in the building.

6 Wiring diagrams

6.5 External fan activation input


The input can be used to control the fan mode of the ventilation unit using a

0–10 V signal. The activation is carried out as in the following diagram.

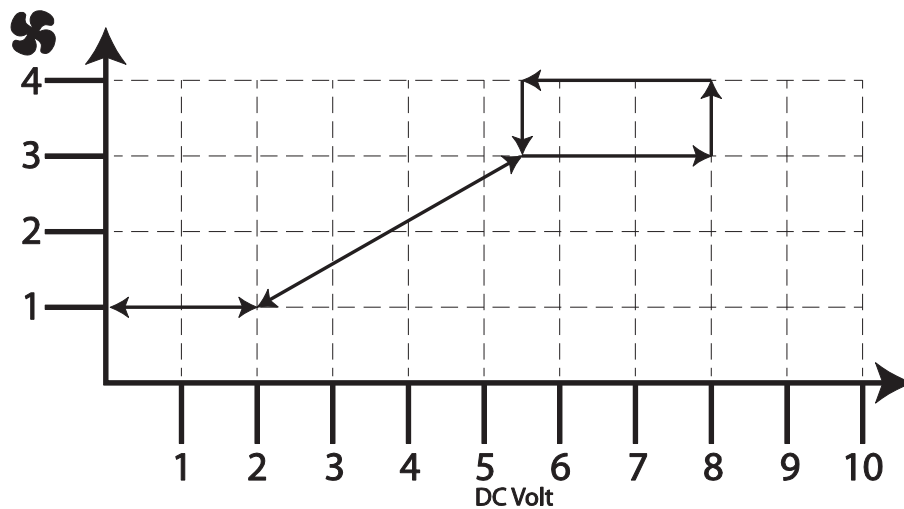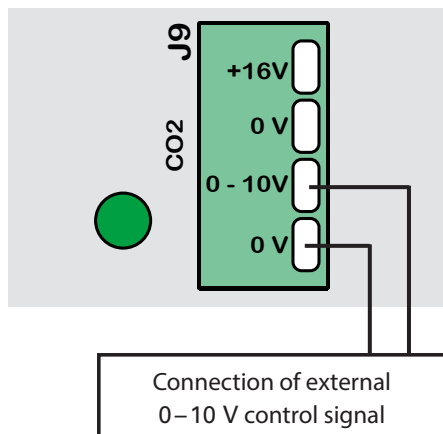

6.6 Error message output

The output can be used to externally display error messages and filter alarms. The output signal is 24 VDC.

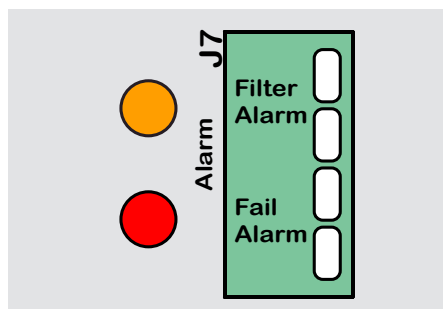

7 Warranty

Deviating from the applicable GTCs, the manufacturer grants a warranty of 24 months from the time of completion of the installation for the profi-air

180 flat connection box. Warranty claims can only be asserted for material and/or construction defects occurring within the warranty peri-

od. In case of a warranty claim, the profi-air 180 flat connection box may not be removed without the prior written consent of the manufacturer.

Warranty expires if

- the warranty period ends;
- parts not provided by the manufacturer are installed;
- unauthorised changes or modifications to the unit are made.

8 Liability

The profi-air 180 flat connection box has been developed and produced for use in so-called comfort ventilation systems. Any other use is considered

“improper” and can lead to damage to the profi-air flat ventilation unit or personal injury which the manufacturer cannot be held liable for.

The manufacturer is not liable for damage attributed to the following causes:

- Failure to comply with the safety, operating and maintenance instructions stated herein.
- Installation of spare parts not provided or stipulated by the manufacturer.
The responsibility for the use of such spare parts rests solely with the installer.
- Normal wear and tear.


In addition, our “General Terms and Conditions” apply as amended, available at www.fraenkische.com.

9 Disposal

Please do not dispose of the profi-air 180 flat connection box with the normal household waste; please

ask your municipal waste consulting authority about collection points and recycling possibilities.

Rooted in Königsberg – globally successful!

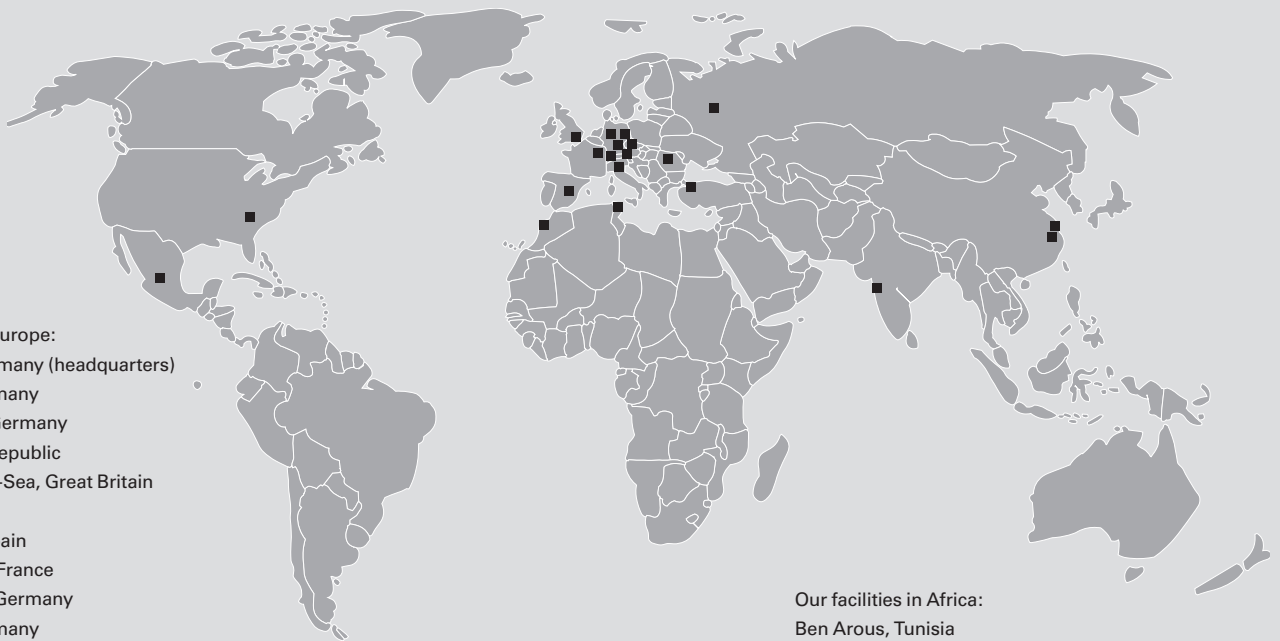

Our facilities in Europe:

Königsberg, Germany (headquarters)
 Bückeberg, Germany
 Schwarzheide, Germany
 Okříšky, Czech Republic
 St.-Leonards-on-Sea, Great Britain
 Moscow, Russia
 Yeles/Toledo, Spain
 Torcy-le-Grand, France
 Ebersbach/Fils, Germany
 Hermsdorf, Germany
 Mönchaltorf, Switzerland
 Milan, Italy
 Istanbul, Turkey
 Cluj, Romania
 Wels, Austria

Our facilities in Asia:

Anting/Shanghai, China
 Hangzhou, China
 Pune, India

Our facilities in Africa:

Ben Arous, Tunisia
 Casablanca, Morocco

Our facilities in North America and Mexico:

Anderson, USA
 Guanajuato, Mexico

FRÄNKISCHE is an innovative, growth-oriented, medium-sized family-owned enterprise and industry leader in the design, manufacturing and marketing of technically superior corrugated pipe systems for drainage, electrical, building technology and industrial applications.

We currently employ about 4,200 people worldwide. Both our many years of experience and expertise in plastics pro-

cessing, our consulting services and the large array of products are highly valued by our customers.

FRÄNKISCHE is a third generation family owned business that was established in 1906 and is now run by Otto Kirchner. Today, we are globally represented with production facilities and sales offices. The proximity to our customers enables us to develop products and solutions

that are perfectly tailored to our customers' needs. Our action and business philosophy focus on our customers and their needs and requirements for our products.

FRÄNKISCHE – Your partner for sophisticated and technologically advanced solutions.